

How To Properly Use Your Lampe Orleans Fragrance Lampe:



STEP 1:

- Place your lampe on a stable surface. The fragrance oil contains alcohol and will damage wood or finished surfaces if it makes contact.
- Remove the decorative diffuser top and snuffer cap from your lampe.
- Insert the funnel into the neck of the lampe.
- Carefully pour the fragrance oil into your lampe.
- Fill only about half to two-thirds of the lampe with oil. Be sure not to overfill!
- Wipe away any excess oil that may have dripped onto the exterior of the lampe.



STEP 2:

- Insert your catalytic burner wick into the lampe. The stone will rest loosely onto the lip of the lampe.
- Place the snuffer cap over the stone. This will keep the oil from evaporating while soaking.
- Allow the stone to soak up the fragrance oil for 20 - 30 minutes. The stone should appear darker in color/wet when ready.



STEP 3:

- Remove the snuffer cap and light the stone with a long match or lighter.
- The stone will ignite a 2 - 3 inch flame; allow the flame to burn for 2 minutes. Do not leave the lampe unattended while the flame is burning!
- After 2 minutes have passed, you may now blow out the flame.



STEP 4:

- Place the decorative diffuser top over the stone.
- The lampe can now be moved to a safe place where it can begin to release fragrance and ionize negative particles, thus cleaning the air.



STEP 5:

- Your lampe will now release a small amount of steam as the hot stone burns off the alcohol and releases the pure fragrance into the air.
- It is recommended that you allow the stone to burn out as it uses all of the fragrance oil. However, if you find the fragrance too strong, you may extinguish the lampe by removing the decorative diffuser top and placing the snuffer cap over the stone. Leaving the wick/stone to soak in the fragrance for an extended period of time may clog the stone and make it difficult for the stone to re-ignite properly. For this reason, we recommend that you burn out the lamp (until the oil has been completely used by the stone) every 2 to 3 days.

**The stone will need to be replaced every 6 to 12 months depending on how often it is burned.*